


Wireless Room Thermometer Hygrometer

Operation Manual

Specification

- 1. Temperature measuring range : -10°C to 70°C(or 14°F to 158°F)
- 2. Humidity measuring range : 20%~95%RH.
- 3. Temperature resolution : 0.1°C or 0.1°F .
- 4. Humidity resolution : 1%RH.
- 5. Power: 3.0V, 2 PCS AAA Battery. (Both the receiver and the transmitters are)
- 6. Low battery alert function (battery symbol flashes)
- 7. Transmitter Installation: With the help of the individual base, the transmitter can stand on the table or be fixed on the wall.
- 8. Comfort level display details

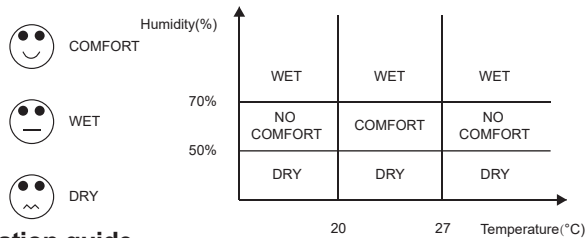

Operation guide

- 1. Receiver battery installation and Power on
Remove battery cover located on the rear of the unit, following the polarity (+/-) diagram in the battery compartment, install the battery. Replace the battery cover. The unit will turn on automatically, Backlight will turn on and all segments of LCD will be activated
- 2. Transmitter battery installation and Power on
Remove battery cover located on the rear of the unit, following the polarity (+/-) diagram in the battery compartment, install the battery, slide the channel switch to different positions. Replace the battery cover. The unit will turn on automatically and the LED on the front of the product will emit red light.

- 3. Signal match
 - (1) After the receiver and the transmitters are powered on, there is 3 minutes for signal matching. Antenna icon "⌘" on the LCD screen of Receiver will flashes. The three transmitters send data (red led emits) as following intervals: CH 1: 57 seconds; CH 2: 67 seconds; CH 3: 79 seconds. If the receiver could not get the signal from the transmitters within 3 minutes, it would stop matching for one hour, and then it will match again for 3 minutes;
 - (2) One receiver can be equipped with three transmitters at most.
 - (3) When the receiver is only equipped with one transmitter, you can slide the toggle switch to any channel (CH 1, CH 2 or CH 3)
 - (4) When the receiver is equipped with two or three transmitters, the toggle switch should switch to the correct channel

4. Buttons function

°C/°F button: Conversion of temperature value between Celsius and Fahreheit.

CH button: Press CH to change the channel, "CH 1", "CH 2", "CH 3" and "Auto Change" in turn.

CLR button: Press this button and hold for 2 seconds to clear the maximum and minimum temperature memory.

 : Press the button once and the backlight will be on for 5 seconds.

Battery replacement

When the battery voltage was lower than 2.5V, the battery symbol would flash and the battery need to be replaced.

NO:153

CH

单张A6纸双面
做货请去掉黑框

148.5mm

210mm

A5纸双面 做货请去掉黑框

Remote Sensor Operation Manual

Wireless Thermometer Hygrometer Instruction

1. Temperature Measuring Range: -50C~70C(-58~158F)
2. Temperature Display Resolution: 0.1C(0.1F)
3. Humidity Measuring Range: 20~95%RH
4. Humidity Display Resolution: 1%RH
5. Low Voltage Indication (Please replace the battery with the new one)
6. Power Supply: 2 pcs of AAA Batteries
7. LED Indicator Light will flash when the temperature & humidity data is transmitted
8. Installation: With the help of the individual base, the transmitter can stand on the table or be fixed/sticked on the wall.

OPERATIONS:

1. One receiver can be equipped with three transmitters at most.
2. When the receiver is only equipped with one transmitter, you can slide the toggle switch to any channel (CH1, CH2 and CH3 are all available and have no difference)
3. When the receiver is equipped with two or three transmitters, the three channels cannot be confound. (Transmitter 1 points to CH1; Transmitter 2 points to CH2; Transmitter 3 points to CH3)
4. The data update period of each channel:
CH1: Every 57 Seconds
CH2: Every 67 Seconds
CH3: Every 79 Seconds

DTH-151